

## Gas regulators

Each caravan or lodge is fitted with a gas regulator and two gas bottles. Whether you use large or small gas bottles, the regulator operates the same way. The regulator allows both bottles to be attached and live simultaneously. When one bottle runs out, the regulator automatically switches to the other bottle, ensuring no interruption in gas supply—for example, avoiding cold water during a shower. You can then order a new gas bottle through the park while using the remaining full bottle.

**Indicator stalk**  
Shows pointing at the right bottle.  
Only to be operated by gas installer/park



**Gas level indicator**  
Red/white – bottle empty,  
Clear/green – bottle has gas

**Emergency Gas isolation valve**  
– viewed in its off position

## What to do on arrival

When arriving on park, the bottles will need to be turned on. This is done by turning the screw valves located on top of the red bottles, see image. It is important to turn on the bottles in the correct order.

This done by looking at the Indicator stalk. If it is pointing at the right bottle, turn this valve on first. If it's the left, turn this one on first, see image.

If you do not do this, the regulator will receive pressure from whatever bottle is first opened and will start drawing in gas.

For example - If you have used half of your right bottle during your last visit but turn on the left bottle first during your next, you will start to run the bottles down unevenly.

This means your spare bottle will not be full and you may run out before we can replace it.

Please note, the indicator stalk should not be moved/adjusted. This is done by the park when they replace your bottle



Gas On/off valve -



Indicator stalk - currently pointing at the right bottle

Turn this bottle on first

## Weekly checks


Your bottles should be checked by yourself weekly. Do this by checking the gas level indicator window.

If it displays a red colour or solid white, you have an empty bottle. The regulator will automatically switch to your second bottle to keep you running. Please then email us to arrange a new bottle to replace the empty. This can take 3-5 days.

If it displays a green or a clear window, like the left image below, you have gas in both bottles so no action is needed



Clear window (may be green depending on regulator brand)  
Both bottles have gas

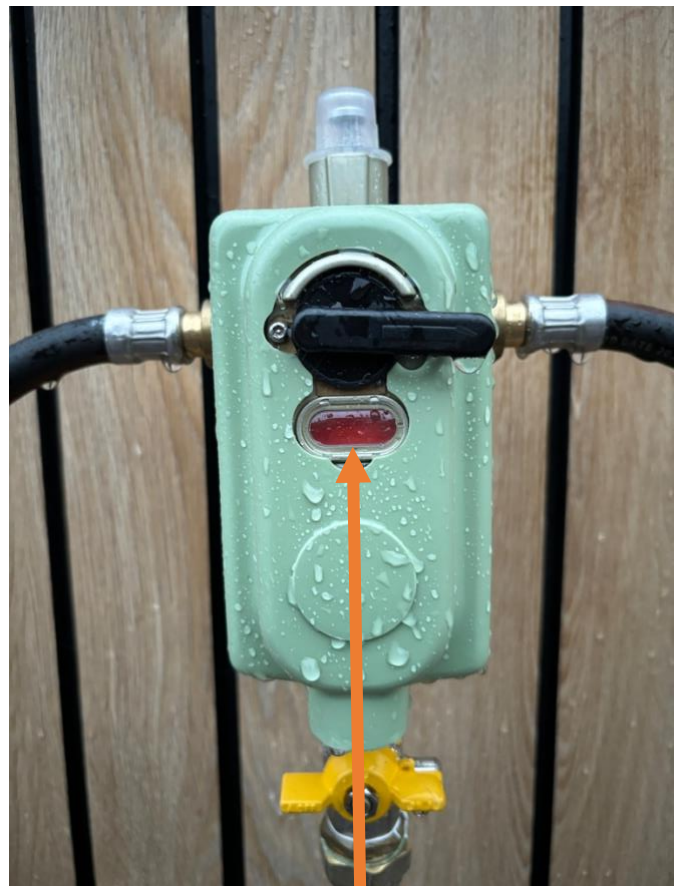

Red window (can be solid)  
White) –  
Bottle empty

## What to do when departing

After you visit, the gas bottles should be isolated (please check your insurance for their terms and conditions as this may differ). This is done by turning off the gas valve on top of the bottles. It will not matter which bottle you turn off first. If you are unsure if the bottles are off, try lighting your hob to see if any gas comes through.

The yellow emergency gas valve is only needed in the event of a fire or major gas leak. For normal operation, the gas valves will suffice for isolating the supply.

**It is essential** that you **check your gas weekly** to ensure you do not run out of gas fully while staying at your caravan. Because of our small team, we may not get to you for 24 hours+.

If you need any help with the above information, please do not hesitate to contact us.